



www.onaroo.com

Product Registration

Please visit American Innovative on the web at www.americaninnovative.com/register/ to register your new purchase.



Note: Due to production changes and improvements, actual product may vary slightly from images shown in manual and/or on packaging.

Manual v0.3 Printed in China

Patent pending. © 2011 American Innovative, LLC

Explore the full Onaroo Line

Please visit us online at www.americaninnovative.com to view our full assortment including the award-winning Teach Me Time!



Teach Me Time! Talking Alarm Clock & Night-Light

Page 10

OK to Wake! Night Owl Portable Night-Light

Instructions For Use Model No. PNL112-US



CAUTION – ELECTRICALLY OPERATED PRODUCT:

Not recommended for children under 3 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

IMPORTANT SAFEGUARDS - PLEASE READ FIRST!

Age Grading

Warning: Not suitable for children under 36 months. Long cord. Strangulation hazard.

Power Source

This product should be connected to a power supply only of the type marked on the outside of the supplied adapter. If you are not sure of the type of power supplied to your home, please consult your local power company.

Battery Replacement

Do not mix old and new batteries - always replace all three batteries at the same time. Always use three batteries of the same type - do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

Service Contact Information

US customers, please check http://www.americaninnovative.com/contact/ for the most up-to-date contact information and for details regarding product servicing and/or warranty claims. You must receive a Return Merchandise Authorization (RMA) number before shipping any item to AI.

American Innovative, LLC ATTN: RMA# (request on-line) 398 Columbus Avenue Suite 321 Boston, MA 02116 USA p. (617) 395-7831

In the United Kingdom Hardenberg&Co Ltd Consumer Helpline, PO Box 2970 Stoke-on-Trent, ST3 9BZ United Kingdom p. +44 (0) 0845 009 1789 e. helpline@onaroo.co.uk w. http://www.onaroo.co.uk

Page 3

American Innovative, LLC * Limited Warranty

Coverage

American Innovative, LLC warrants this product against defects in original material and workmanship for a period of ninety (90) days, under normal use and conditions.

Non-Coverage

This warranty does not cover customer instruction, installation, set up or signal reception problems. This warranty does not cover cosmetic damage or damage resulting from acts of God, accident, misuse, abuse, negligence, commercial application (or rental), or modification. This warranty does not cover damage due to improper operation or maintenance, connection to an improper voltage supply, or attempted repair by anyone other than American Innovative, LLC or American Innovative, LLC authorized service facilities. This warranty does not cover products sold "as is" or "with all faults". This warranty is valid only in the United States and is invalid if the product serial number has been altered or removed.


Making a Warranty Claim

Please check http://www.americaninnovative.com/contact/ for the latest information pertaining to warranty claims. At the company's discretion, American Innovative will repair or replace the defective unit. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the warranty period must be presented to obtain warranty service.

Page 8

Introduction

Congratulations on your new purchase! Your new Night Owl night-light is designed to run on AC power while sitting in the base and battery power when removed for portability. There are no sealed rechargeable cells to wear out and the dual-power arrangement extends the useful life of the replaceable batteries when used in the recommended fashion.

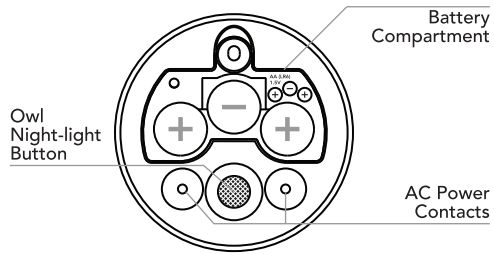

Page 5

Installing Batteries

The Night Owl requires three AA (LR6) type batteries. To install the batteries, use a small Phillips-head screwdriver to open the battery door. Install the batteries as shown in the diagram. The two outer batteries are installed with the positive end facing out. The center battery is installed with the negative end facing out. Replace the battery cover and tighten the screw.

Using the Night Owl Night-Light

Use the button on the bottom of the Night Owl to change the night-light color. Tapping this button toggles through the colors in the following order: Yellow, Blue, Pink, Off. If left off the base, the Night Owl will automatically turn off 30 minutes after the last tap to conserve battery life. Place the Night Owl onto the base to have the most recently selected night-light color illuminated indefinitely. Notice that, when placed on the base, the Night Owl flashes three times to indicate that the night-light is now running on AC power. If you do not observe the flashing, reposition the Night-Owl on the base to ensure a solid connection.

Page 6

Using the Green "OK to Wake!" Light

"OK to Wake!" teaches kids to stay in bed or to play quietly in their room until "Green means GO!" The Night Owl "OK to Wake!" time needs to be set once, by the parent, in real-time. Wait until the time that you would like the green light to come on in the morning (7:00am, for example) and then press-and-hold the button on the bottom of the Night Owl for five (5) seconds. After five seconds the green light flashes and turns on. The "OK to Wake!" time is now set.

The green light stays lit for 30 minutes (if left off the base) and then turns off automatically to conserve battery life. If the Night Owl is placed in the base, the green light stays lit for 30 minutes and then changes to the most recently selected night-light color and remains on. The next morning the green light turns on again, at the same time. You may adjust the "OK to Wake!" time by pressing-and-holding the button on the bottom of the Night Owl at any time. To discontinue use of the "OK to Wake!" light, remove the batteries to reset the unit.

Page 7

FCC INFORMATION

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

ABOUT AMERICAN INNOVATIVE

American Innovative™ was founded to pursue the development of innovative new products that should exist, but don't. "Products that make sense™" is our motto and the execution of this philosophy can be seen throughout the company's product line. Careful attention to the needs of the user and a keen eye for industrial design and user interface engineering are the secrets of American Innovative™'s success. To learn more about American Innovative™ and the full Onaroo™ line of smart products for children and their parents, please visit us on the web at www.americaninnovative.com.

Page 4

American Innovative, LLC * Limited Warranty

Other Information

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE, BEGINNING WITH THE ORIGINAL DATE OF PURCHASE. NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT WILL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER. UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

Applicability of State Law

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

Page 9



Page 2



Page 11