

Important Safety Information

This product, model no. EPT071-US, is CE certified. Keep the product a safe distance from open flame sources. Do not submerge or otherwise splash or drip liquids on the product. Dispose of depleted batteries properly.



Batteries

Your product comes with three CR2032 button cells already installed. Prior to first use you must remove the protective plastic that prevents the batteries from draining during transit: Open the battery door in the direction of the arrow. Remove the protective plastic from each cell and replace the battery door. If the time is still not visible, press RESET (back of unit) using a paperclip.

When the batteries need replacing, note that the center and right batteries power the colored lamps. The left battery powers the display. You need only replace one set or the other, as required.

Setting the Time

- 1) If it is off, turn on the Roadshow by pressing the **MODE** key.
- 2) Ensure that the Roadshow is in **TIME** mode.
The display indicates the time.
- 3) Press and hold the **LENGTH** key for two (2) seconds.
The time flashes and the clock format (12/24 Hr) is displayed.
- 4) If desired, toggle the clock format by pressing the **MODE** key.
- 5) Adjust the current time using the + and - keys. Press and hold these keys to scroll rapidly.
- 6) Press the **LENGTH** key once to exit Setup. *Note: Setup will also exit automatically after one minute of inactivity.*

American Innovative, LLC * Limited Warranty

Coverage

American Innovative, LLC warrants this product against defects in original material and workmanship for a period of one (1) year, under normal use and conditions.

Non-Coverage

This warranty does not cover customer instruction, installation, or set up problems. This warranty does not cover cosmetic damage or damage resulting from acts of God, accident, misuse, abuse, negligence, commercial application (or rental), or modification. This warranty does not cover damage due to improper operation or maintenance, connection to an improper voltage supply, or attempted repair by anyone other than American Innovative, LLC or American Innovative, LLC authorized service facilities. This warranty does not cover products sold "as is" or "with all faults". This warranty is valid only in the United States and is invalid if the product serial number has been altered or removed.

Making a Warranty Claim

Please check <http://www.americaninnovative.com/service/> for the latest information pertaining to warranty claims. To obtain warranty service, contact American Innovative customer service via electronic mail at service@americaninnovative.com, or call 617.395.7831 or 866.663.2393. At the company's discretion, American Innovative will repair or replace the defective unit. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the warranty period must be presented to obtain warranty service.

Other Information

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE, BEGINNING WITH THE ORIGINAL DATE OF PURCHASE. NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT SHALL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER. UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.


Applicability of State Law

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

Printed in China.

Roadshow Travel Alarm

Model no. EPT071-US, Instructions for Use

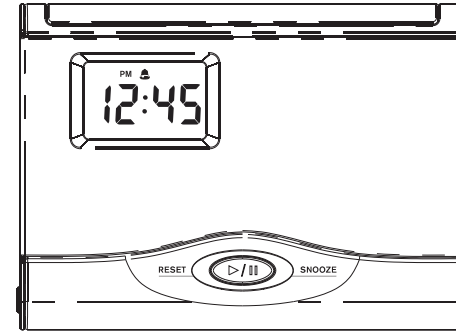

Product Registration

Please visit American Innovative on the web at www.americaninnovative.com/register/ to register your new purchase.

Introduction

Cycle through the Roadshow's four operating modes by pressing the **MODE** key. Press and hold the **MODE** (⏸) key for two (2) seconds to turn the unit off. Press **MODE** again to resume use.

⌚ TIME Mode


TIME mode is used to display the current time of day. If the alarm is On (🔔 visible), it will sound at the time programmed in **ALARM** mode (see below). While sounding, press ▶/|| to snooze for ten (10) minutes. To cancel the sounding alarm until the next day, press any key on the keypad.

🔔 ALARM Mode

ALARM mode is used to adjust (or review) the travel alarm clock settings. When first purchased, the alarm is set to 7:00am and it is Off. Use the + and - keys to adjust the wake time. The **AMBER** (🔔) key is used to toggle the alarm state On (🔔 visible) or Off. *Note: The alarm only sounds in TIME and ALARM modes.*

Other Features

Quick Entry: Press and hold the + and - keys to scroll rapidly.
Low Battery Indicator: Replace the lamp batteries (see reverse) when the low battery icon (🔋) illuminates. The LCD display runs on its own separate battery but there is no related indicator.
Power Save: Press and hold the **RED** (🔴) key for two (2) seconds to disable the backlight (the 🌙 icon appears). Hold this button again to enable the backlight.

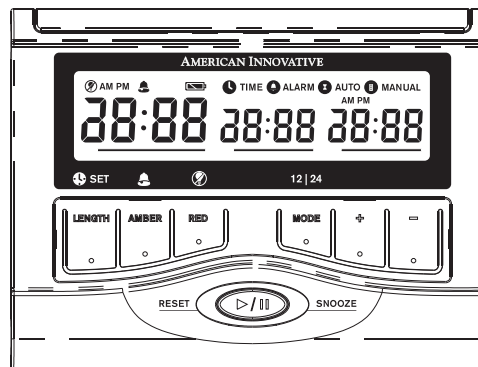

Presentation Modes Overview

The presentation modes are used to facilitate timed lectures by illuminating the Roadshow's lamp array. The two modes operate slightly differently – adjust the parameters as described at right.

1-Minute Warning: In either mode a visual "1-minute warning" is indicated by a flashing lamp (5 seconds total).

Audible Warnings: If desired, an audible tone sounds at the 1-minute warning and again at the completion of the presentation. Audible tones are heard only if the bell icon (🔔) is visible. Toggle the bell icon On or Off as described under **ALARM** Mode.

🔔 AUTO Presentation Mode

In **AUTO** mode all six colored lamps light sequentially for one-sixth of the total presentation duration. Use the + and - keys to adjust the total presentation duration (up to 4 hours). Please read "During the Presentation" below.

🔴 MANUAL Presentation Mode

In **MANUAL** mode only three lamps are used (one green, one amber and one red) and it is up to the user to select the transition points.

Set the total presentation duration, the amber transition (the time remaining when the green lamp switches to amber) and the red transition (the time remaining when the amber lamp switches to red); Press the **LENGTH**, **AMBER** or **RED** key and then adjust that parameter using the + and - keys. A black underscore appears in the display below the active parameter. *Note: If invalid values are entered, a red warning lamp appears when ▶/|| is pressed.*

During the Presentation

Press ▶/|| to begin the presentation. A green lamp illuminates and the black underscore disappears. The presentation settings are not adjustable while the presentation is in progress. Press ▶/|| again to pause. Settings may now be adjusted, if desired.
Upon completion, a timer counts up from 0:00 (up to 30 minutes). Press ▶/|| once to stop the count and once more to reset. At any time, to reset the presentation back to the beginning, press and hold ▶/|| for two (2) seconds.